


# Модуль аналогового ввода MAI-081 (MAI-081-01)

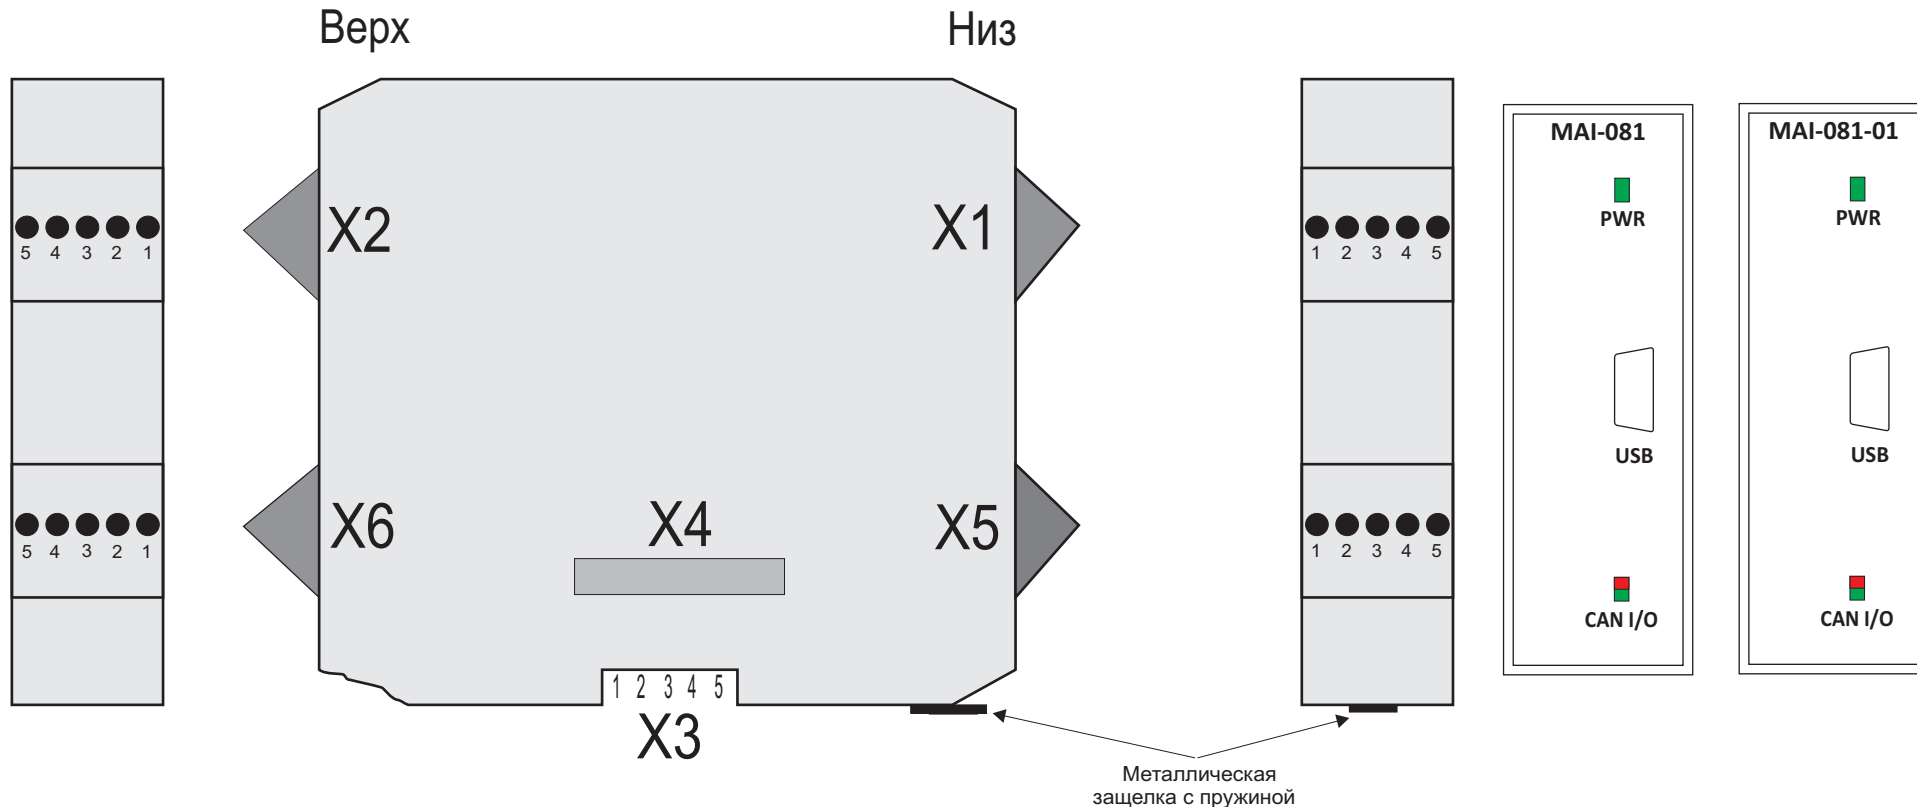

Контакт	X1.1	X1.2	X1.3	X1.4	X1.5	Контакт	X2.1	X2.2	X2.3	X2.4	X2.5
Цепь	AIN 1	AIN 2	AIN 3	AIN 4	COM	Цепь	AIN 5	AIN 6	AIN 7	AIN 8	COM
Контакт	X5.1	X5.2	X5.3	X5.4	X5.5	Контакт	X6.1	X6.2	X6.3	X6.4	X6.5
Цепь	AD 1	AD 2	AD 3	AD 4	GND	Цепь	AD 6	AD 5	GND	TERM1	TERM2
Контакт	X3.1	X3.2	X3.3	X3.4	X3.5	Контакт					
Цепь	0V	CAN-H	CAN-L	CAN-GND	+24V	Цепь					